


Instructions for changing the release toggle on SPIKE bulldog bindings:

- 1) Slide a credit card (or similar thin piece of plastic) between the rear cross bar and the latch (red arrow in picture below). This releases the spring tension and allows the release toggle to jiggle loosely.
- 2) Reach under the release toggle with a small screw driver (or similar small tool) and turn the cotter pin 90 degrees so that it can slide out through the slot in the top of the release toggle (blue arrow).
- 3) Turn the binding upside down and jiggle the release toggle until the cotter pin slides out (you may need to use the screw driver to nudge the cotter pin to help it slide out).
- 4) Release the credit card and allow the latch to spring back. Be careful to let the latch out slowly so latch spring stays inserted through the latch.
- 5) Replace the release toggle and toggle washer.
- 6) Slide the latch forward with your thumb and aligning it with the hole in the front of the base and release toggle and repeat step 1 with the credit card.
- 7) Slide the cotter pin back into the hole through the top of the release toggle and through the hole in the end of the latch.
- 8) Turn the cotter pin 90 degrees so it rests flat against the release toggle washer. Remove the credit card and you are done.

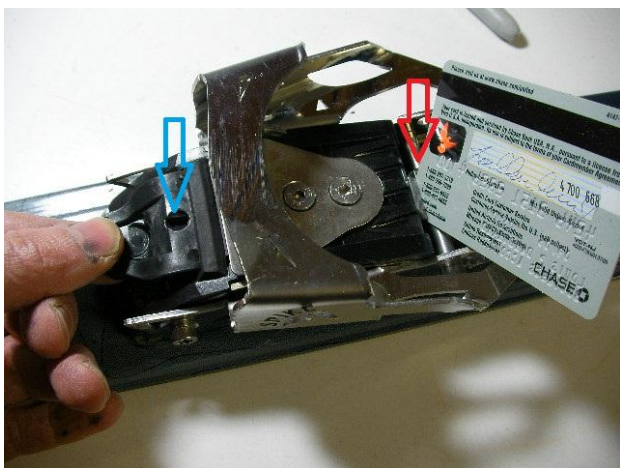

Cotter pin turned so it can slide out cotter pin turned so it rests flat against the release toggle washer

