



6 5 4 3 2 1 1 2 3 4 5 6

### Mounting Template

- 1) Find and mark pin line.
- 2) Align the boot pin holes over the pin line and mark the back of the boot heel.

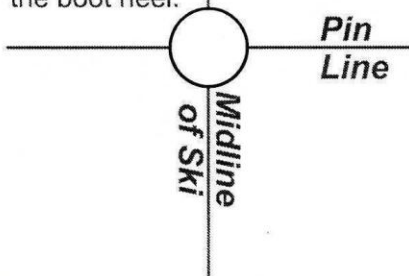

[www.Telebulldog.com](http://www.Telebulldog.com)



- 3) Cut out the circles along the pin line and boot heel line.
- 4) Tape the template to the ski after aligning a number matched pair of lines over the ski edges and aligning the pin line over your mark.
- 5) Center punch the 4 binding mounting holes.
- 6) Reposition the template so the back of boot heel line is on your mark.
- 7) Center punch the 2 heel plate mounting holes.
- 8) Drill all holes 3/8" deep.
- 9) Fill holes with waterproof glue.
- 10) Screw the toe piece and brake plate down with the binding open.

binding toe piece

standard 4 hole mounting pattern

A fifth mounting screw can be placed between the 2 rear mounting holes for extra strong mount.

heel riser

standard 2 hole mounting pattern

If you are using NT/LT/RTbulldog separate heel riser is not needed except for touring.

6 5 4 3 2 1 1 2 3 4 5 6

